

# Removable DVR/ Camera Portable Radar Gun System




## MP4 PLAYER



### Recording Mode

1. Hold "POWER" for 3 second to turn on or off MP4 Player.
2. Main Menu Pop up after powered up.

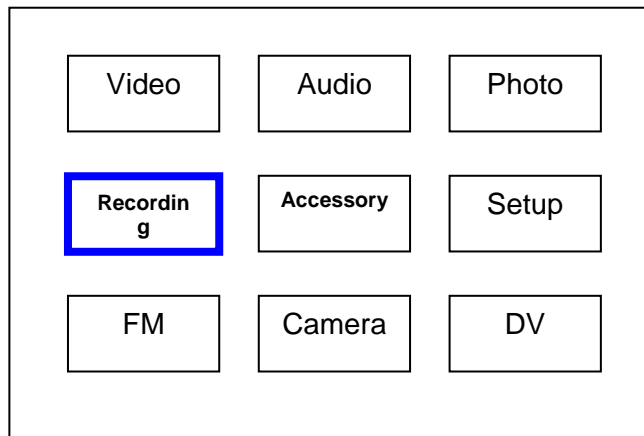


Main Menu

# Removable DVR/ Camera Portable Radar Gun System



3. Choosing recording menu by using joystick to move the cursor to left/right up/down and push in center to enter to sub-menu. Move cursor to " AV in " and push "OK" to enter the AV in and Push " PLAY/RECORD " to start recording the Video. The recording time will show up on the LCD". The AV input and be PAL/NTSC. This is auto detection.

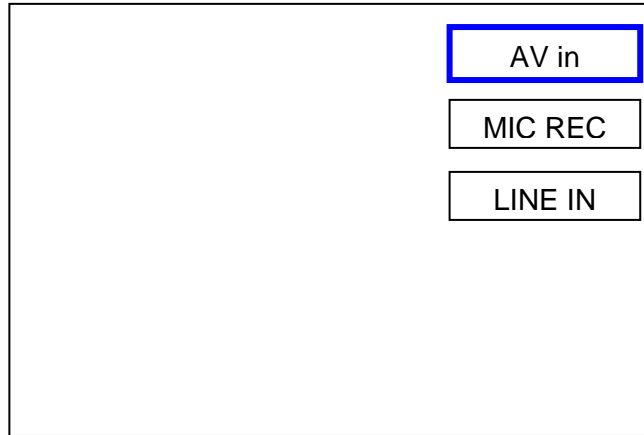


REC Menu

4. Push " Mode " to stop the recording and exit off recording and return the REC menu.
5. Push " ESC " to exit off sub-menu and return to man menu.

## Playback Mode

1. Choose " Video " on the main menu and push "OK" to enter.

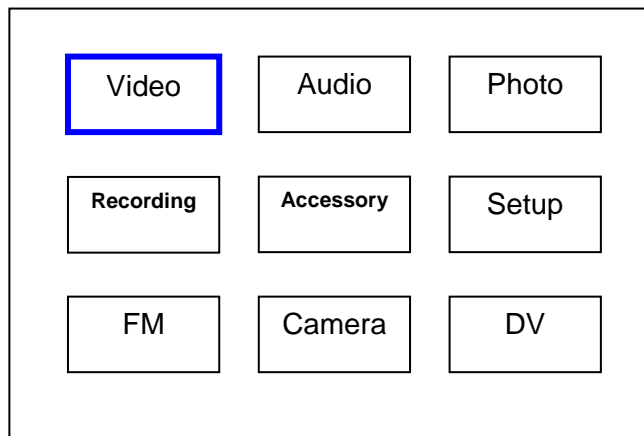

Main Menu

2. Move cursor to select the recorded video and Push "PLAY/RECORD" to play the video.
3. Push "Mode" to stop of playback.
4. Push "ESC" to exit to main menu.

# Removable DVR/ Camera Portable Radar Gun System




## Playback Properties

1. In Play back mode. Move cursor to select the recorded video and Push"OK" to enter Video Properties, Move the cursor to set the properties.

EQ MODE	Classic/Pops/Rocks/Jazz/Bass/Normal
PLAY MODE MODE	ONE/ALL/RANDOM/NORMAL
PROTECT	PROTECTED/UNPROTECTED
DELETE	ONE/ALL
AUDIO SET	8K/16K/24K/32K/48KHz
Information	File Name/ Time Date


## System Configuration:

1. Move the Cursor to "Setup" and push "OK" to enter the menu.

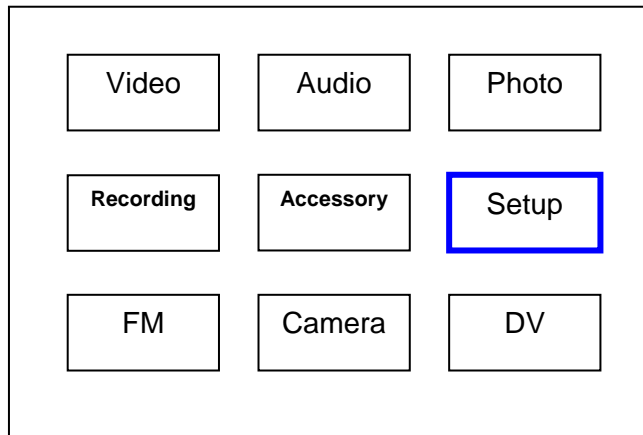

### Main Men

The Setup Menu will appear as below:

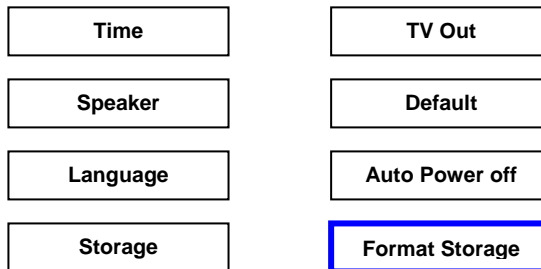

- |                |                                   |
|----------------|-----------------------------------|
| Time Date      | - YYYY/MM/DD 24H                  |
| TV Out         | - NTSC/PAL/ <b>Self LCD</b>       |
| Speaker        | - SPEAKER <b>ON/OFF</b>           |
|                | - BEFF <b>ON/OFF</b>              |
| Default        | - <b>No/Yes</b>                   |
| Language       | - <b>English/China</b>            |
| Auto Power off | - <b>Never /3m/15m/30m</b>        |
| Storage        | - <b>Nandflash/CARD/PC-Device</b> |
| Format         | - <b>Nandflash/Card</b>           |

## Removable DVR/ Camera Portable Radar Gun System



### Initial Logo Setup.

1. Connect your MP4 Player to PC and down load JPEG file to MP4 Player
2. Move cursor to "Photo" and push "OK" to enter
3. Move Cursor to your Logo file and push "PLAY/RECORD" to open or play file.
4. your file will display full screen on LCD. and push "OK". This message will pop up and down for a second 'set start picture" This picture will show while system initialization.
5. Push "ESC" to exit full screen and push "ESC" again to main menu.