


Viewer Software

Viewer software is a remote viewer software for control the DVR.

- This software supports the multiple functions of the network.
- It can search as many DVRs as necessary.
- It can support two display modes and help you control your favorite screen sizes.
- It has an extremely powerful search mode to help you search recorded data for the event / time you want.
- It supports your local PC simultaneously with the DVR backup data.

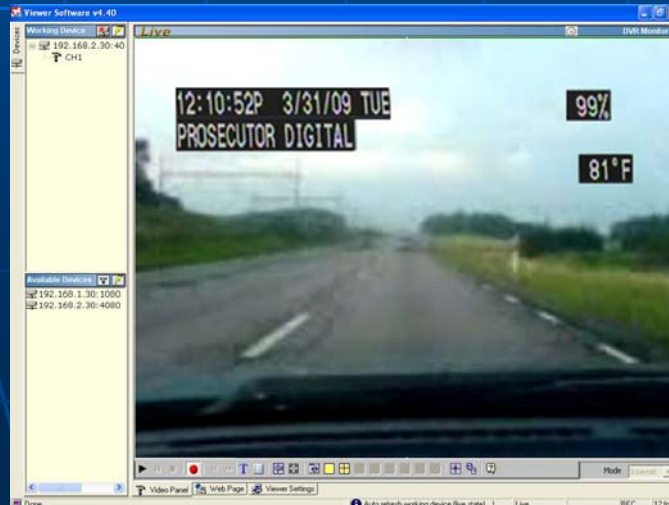

Viewer Software

The programs can be operated by a selected PC equipped with the following requirements :

- Intel Pentium 4 2.4MHz (at least).
- 512 MB RAM.
- Windows 2000, XP or above.
- 32 MB Video card capable of 24-bit true color display.
- 160 MB free hard-disk space for software installation.
- 10-base T network for LAN operation.

Viewer Software

Short introduction

Now the "Login" page appears. Enter the default "User name : admin" and the "Password : 9999" in their respective entries, and click the "Login" button to log into the application.



The image shows a screenshot of a Windows-style application window titled "Viewer Software". The window has a blue header bar with the text "VIEWER SOFTWARE" and a decorative background of butterflies and a camera lens. Below the header, there are two input fields: "User Name" and "Password". To the right of the "User Name" field is a "Login" button, and to the right of the "Password" field is a "Cancel" button. The window also features standard Windows window controls (minimize, maximize, close) in the top right corner.

User Name	<input type="text"/>	Login
Password	<input type="text"/>	Cancel

Viewer Software

The screenshot shows the 'Viewer Software v4.40' window. On the left, there are two panels: 'Working Device' and 'Available Devices'. The 'Working Device' panel shows a selected device with IP '192.168.2.30:4080' and channel 'CH1'. The 'Available Devices' panel lists two other devices: '192.168.1.30:1080' and '192.168.2.30:4080'. A large callout box points to these panels, explaining that they show the DVR list and that users can connect by double-clicking and entering a 'Username' and 'Password'. A smaller callout box points to a toolbar at the bottom, explaining that the buttons in the toolbar are 'Function Keys' used to execute various functions. The main area of the software is a 'Live' video feed, and the bottom status bar shows 'Mode Internet', 'Auto refresh working device (live state) ...!', 'Live', 'REC', and '12 fps'.

Available Devices : Here the whole DVR list is shown. You can connect with your selection. Double click any of them to open the screen below. Please enter the correct "**Username**" and "**Password**" to log into this DVR. The default "**Username**" and "**Password**" are "**adm**"

Function Key : Click each of these buttons to execute its functions.

Viewer Software

The screenshot displays the 'Viewer Software v4.40' application window. On the left, a 'Devices' sidebar shows a 'Working Device' tree with IP 192.168.2.30 and channels CH1-CH4, and an 'Available Devices' list with IP 192.168.1.30 and 192.168.2.30. The main 'Web Page Viewer' area shows a 'DVR' header with 'Viewer', 'Setup', and 'PTZ+' tabs. Below are 'REC SETTING' (RATE: 12.5F/S, QUALITY: STANDARD) and 'ALARM REC SETTING' (ENABLE: ON, RATE: 12.5F/S, QUALITY: STANDARD) sections. A 'Send' button is present. The bottom status bar includes 'Video Panel', 'Web Page', 'Viewer Settings', 'Auto refresh working device (live state) ...!', 'Live', and 'REC'.

Viewer Software v4.40

Working Device 192.168.2.30:40

- CH1
- CH2
- CH3
- CH4

Available Devices

- 192.168.1.30:1080
- 192.168.2.30:4080

Web Page Viewer

DVR

Viewer Setup PTZ+

REC SETTING

RATE: 12.5F/S QUALITY: STANDARD

ALARM REC SETTING

ENABLE: ON RATE: 12.5F/S QUALITY: STANDARD

Send Clear

Video Panel Web Page Viewer Settings

Auto refresh working device (live state) ...! Live REC

Viewer Software

